


Casavant Organ Console

Altar

Switch
Access Ramp
Ramp

Enter SR

Stair Unit

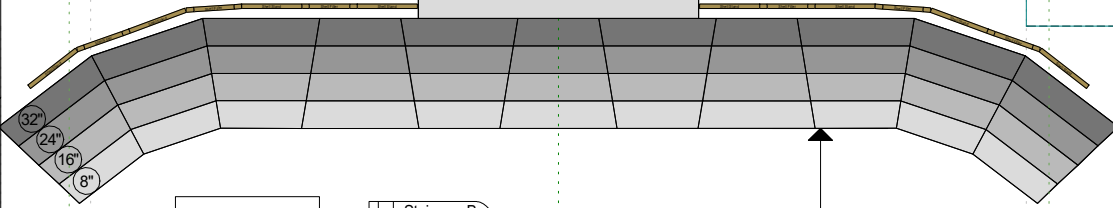

Drum Cart
8'x8'
SL only

Steinway B
Grand Piano
(Movable)



12'

52'

Stair Unit

Exit SL

Note that for better accessibility on stage, the drum kit will live OFF stage left on a raised platform. It is not moveable.

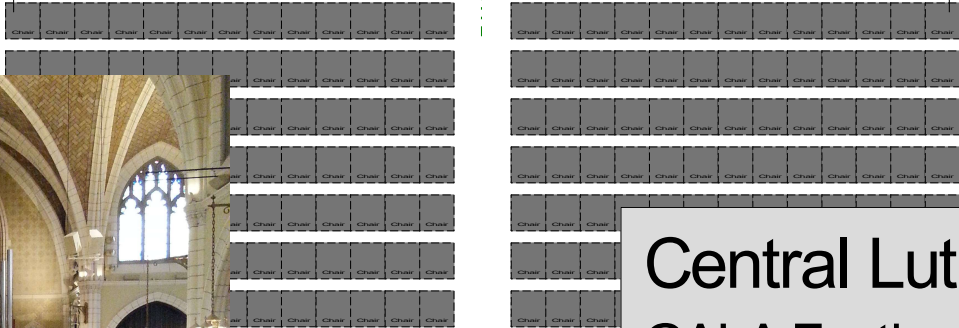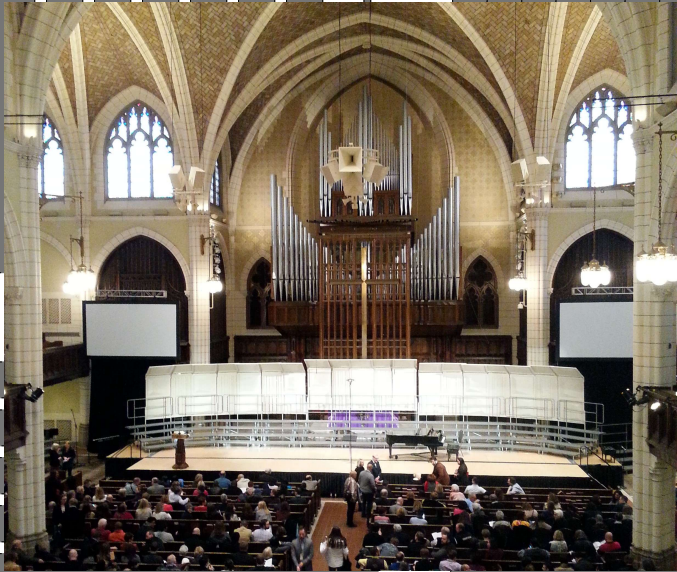


Central Lutheran Stage GALA Festival 2024

Minneapolis, MN July 10-14, 2024

Date Drawn: April 2, 2024

Aprox. Scale 3/32" = 1'

 Concept drawing only. All measurements and seating areas are approximate.



Available Technical Equipment for Festival Stages

List lighting and audio needs individually for each song in Integra.

General Lighting

Standard Lighting
Warm Wash
Cool Wash

Instruments

Grand piano (tuned daily)
Drum kit on rolling cart: Bass with pedal, floor tom, tom, snare, high hat, crash, ride, sticks, throne
Bass amp w/ cabinet
Guitar amp
2 Direct Inputs (for Bass and Guitar)

Specials (on or off)

ASL Interpreter Left
Instrumentalist Left
Piano Left
Soloist Left
Soloist Center
Conductor Front Light
Conductor Back Light
Soloist Right
Instrumentalist Right
Piano Right
ASL Interpreter Right

Audio

4 wireless handheld solo mics and 4 mic stands
2 wired mics and 2 mic stands
3 wireless headset mics (Countryman)
4 audio monitors downstage
4 audio monitors for the risers
4 audio monitors for instrumentalists
Mics on the piano
Hanging chorus mics above the risers
Shotgun mics downstage for breakout groups (Crown area mics)

The grand piano and drum kit standard locations are at STAGE RIGHT. Your chorus may choose to have them moved, but the time to move and return them to their standard locations will come out of your performance time. Any piano movement requests must be noted with your **Annotated Stage Layout** and notes in the Integra **Song & Production Entry**.

Riser Setup – Central Lutheran Stage (CLC)

Riser setups below show dimensions by height x depth x width (H x D x W) and assume about 18 square inches needed per singer. The “Count” for each level reflects a suggested **maximum** on that level.

RISERS: 4-level risers arced at the ends, no stairs

Level	H x D x W	Count
Floor	open	open
Riser Row 1	8" x 18" x 52'	34
Riser Row 2	16" x 18" x 54'	36
Riser Row 3	24" x 18" x 56'	37
Riser Row 4	32" x 18" x 58'	38
	Riser Total	145

Questions?

Contact GALA Festival 2024 Production Manager Chipper Dean
productionmanager@galachoruses.org